

If your main television program source is a cable or satellite box, you probably use the cable/satellite remote control for channel and volume adjustment. After following the steps outlined in this guide, you can continue to use your cable/satellite remote control to adjust the volume output from the V-Series system.

Your Current TV Remote Can Control Your ZVOX System.

The steps involve pressing the Volume, Mute, and Power buttons of your favored remote control with it positioned close to the control panel of the V-Series system. The V-Series system allows these new commands to adjust Volume, Mute and Power. To insure accuracy, the ZVOX Learning routine records each button's infrared signal twice, then confirms a successful recording.

PREPARE 1



Sit within easy reach of the V-Series system's front control panel.

You will need to press two buttons on the V-Series system front panel to start the learning process, then press four remote control buttons.

PREPARE 2



Locate the following buttons on your remote control:

- 1 VOLUME UP
- 2 VOLUME DOWN
- 3 MUTE
- 4 POWER

The learning process involves pressing these four buttons in sequence.

This remote is only an example. Your remote is probably different. Please locate these buttons on your remote.

PREPARE 3



Press both **VOLUME** buttons on the front panel until "Lrn" appears (about 4 seconds). Then release both **VOLUME** buttons.

- Get ready to press **VOLUME UP** on the Remote Control.

Error Message Of the ZVOX Learning Routine



If you see the "no change" message (**noch**) during the learning routine, the V-Series system did not accept the infrared code. The current step in the learning routine will repeat.

Learn Button 1 volume up



When **UP 1** appears, press and hold VOLUME UP.



When **----** appears, release VOLUME UP.




When **rEP** appears, press and hold VOLUME UP, again.




When **Good** appears, release VOLUME UP.

Learn Button 2 volume down

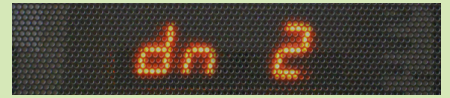

When **dn 2** appears, press and hold VOLUME DOWN.

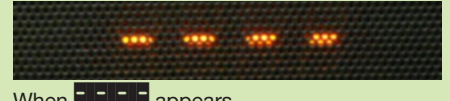

When **----** appears, release VOLUME DOWN.




When **rEP** appears, press and hold VOLUME DOWN, again.




When **Good** appears, release VOLUME DOWN.

Learn Button 3 mute

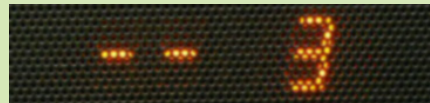

When **M 3** appears, press and hold MUTE.

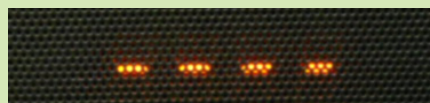

When **----** appears, release MUTE.



When **rEP** appears, press and hold MUTE, again.



When **Good** appears, release MUTE.

Learn Button 4 power



When **Pr 4** appears, press and hold POWER.



When **----** appears, release POWER.



When **rEP** appears, press and hold POWER, again.



When **Good** appears, release POWER.

..... YOU ARE DONE!

You Probably Don't Need To Read This!

*Special Instructions For TVs That Won't Allow You To Turn Off Internal Speakers—
And Instructions For Defeating Automatic Standby Functionality.*

Teaching the V-Series system to respond to your current remote:

Alternate Methods

Note: The remote control for your cable control box or your satellite control box is referred to as the "Cable/Sat remote". The following assumes you want to control your TV with your Cable/Sat remote.

Problem: After teaching the V-Series system to respond to the Cable/Sat remote, both the V-Series system and the TV speakers are heard. The TV speakers do not sound good and may not synchronize with the V-Series system sound.

Solutions:

1

Turn off the TV speakers using the on-screen menu choice offered on most TVs. Not all TVs have this feature.

OR

2

If the cable or satellite box connects to the TV using HDMI:

Re-configure your Cable/Sat remote (by using the Cable/Sat remote's "restore defaults" capability) to "unlock" its Volume buttons. Set the Cable/Sat remote to "set top box" control mode (not "TV" control mode). The Cable/Sat remote will now send out volume commands that do not affect the TV speakers.

Repeat the "ZVOX Learning Routine" procedure.

OR

3

If neither of the first two solutions apply to your system, you can use the "Unused Brand" solution. You change the "TV" section of your Cable/Sat remote and the V-Series system to use remote commands that don't affect your TV's volume control—an "unused brand". This method will work no matter which brand TV or Cable/Sat remote you have.


"Unused Brand" Control Instructions

The V-Series system can be set to respond to the remote volume commands for one of the following brands: Sony, LG, Samsung, Vizio and Panasonic. It is likely your Cable/Sat remote control will be able to send the Volume commands of the TV brand you select as the V-Series system control brand.

Configure the V-Series system to respond to one of the five brands. Use the pictures below as a guide. Just be sure it is NOT the brand of your TV, DVD/Bluray player or other audio/video component in your TV system.

Consult your Cable/Sat remote "Brand and Code" listing. Look for control codes for the brand you selected for the V-Series system. There may be several. Follow the Cable/Sat remote instructions for entering a code number. We suggest you apply the number to the "Aux" or "Audio" button on your Cable/Sat remote. You should be able to find a control code that adjusts the volume and mute of the V-Series system. You may have to try a second brand if the first brand you choose doesn't work.

After you have found a control code that adjusts the volume on the V-Series system, we suggest you use your Cable/Sat remote control's "Volume Lock" feature. This forces the remote volume buttons to adjust the V-Series system, independent of the Cable/Sat remote "operation mode": Set-top box/TV/DVD/Aux.

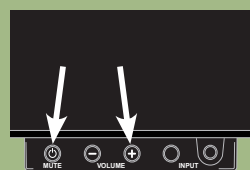

Press both buttons to start the "Choose Brand" function.



Press the Volume Up button to select a different setting. The new setting is stored when the display turns off.

PS-0 Learned Commands

PS-1 Sony

PS-2 LG

PS-3 Samsung
PS-5 Panasonic
PS-4 Vizio

Automatic standby operation of the V-Series system.

The V-Series system automatically enters Standby if there is no audio signal for about 3-4 minutes. Pressing the volume or mute buttons on the remote control will restore sound. You can defeat this automatic Standby behavior by following these steps.

- 1 Switch the V-Series system's rear panel **POWER** switch to **OFF**.
- 2 Press and hold down the **POWER** button on the V-Series system's front panel.
- 3 Flip the rear panel **POWER** switch to the **ON** position before releasing the front panel **POWER** button. The display will show "noAS" (for no AutoStandby).

The V-Series system will now enter Standby only when you press the Power button on the remote or press the front panel **POWER** button for 4 seconds.



- 4 You can restore automatic Standby operation by repeating the procedure. In this case, the front panel display will show "AS" (Auto Standby).



If your first choice of brand on the V-Series system does not work, repeat the procedure using a different choice of brand.