

ZVOX Z-Base 555 Quick Setup

Position The Z-Base 555.



“TV base” position




Shelf position

Place the Z-Base 555 on stable, flat surface. Ensure all components are safe and secure.

Connect the power cord.



Back of Z-Base 555

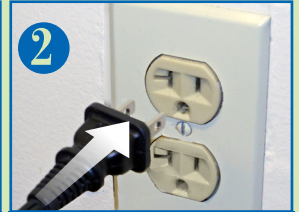

AC Power Receptacle

Connect the AC power cord to the back of the Z-Base 555. Leave the Power Switch in “Off”. Then insert the AC plug into an AC power receptacle.

Connect to Audio Output of TV.




Back of TV

Optical Audio Output

Connect one end of an optical digital (toslink) cable to the TV’s Audio Out optical jack.

Connect to Audio Input of Z-Base 555.

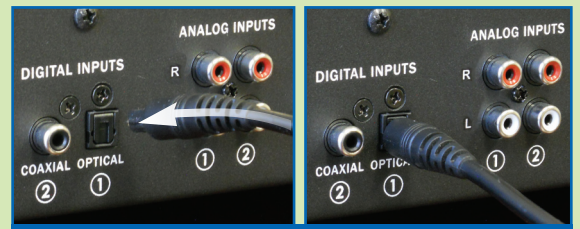

Back of Z-Base 555

Z-Base 555’s Optical Audio Input


Connect the other end of the optical cable to the Z-Base 555’s optical input jack.

Flip on the Power.



Select the correct input.

Select the TV input using the remote control **OR** the front panel.

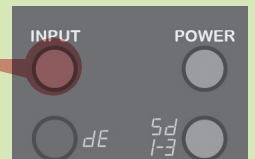


Optical digital input Coaxial digital input Input 1 (rear panel) Input 2 (rear panel) Input 3 (front panel)

Other Audio Connection Options

Phono Jack Analog Audio Out

White/red pair of phono output jacks (not “input”) on back of TV.

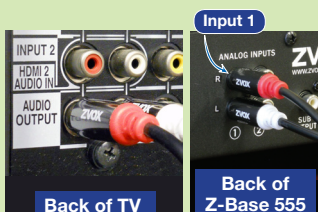


Back of TV

Back of Z-Base 555

“Minijack” Analog Audio Out

Out Some TVs use a “minijack” output (not “input”) or headphone jack.

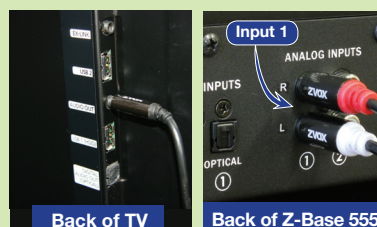


Back of TV

Back of Z-Base 555

Coaxial Digital Audio Output

(Single phono jack, may be orange)

Any cable with a phono plug at each end can be used.

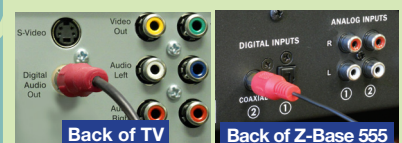

Back of TV

Back of Z-Base 555