

# ZVOX Z-Base 580 Quick Setup

## Position The Z-Base 580.



“TV base” position




Shelf position

Place the Z-Base 580 on stable, flat surface. Ensure all components are safe and secure.

## Connect the power cord.



Back of Z-Base 580

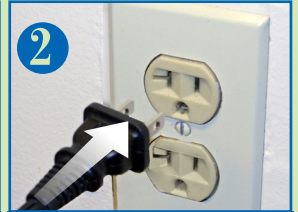

AC Power Receptacle

Connect the AC power cord to the back of the Z-Base 580. Leave the Power Switch in “Off”. Then insert the AC plug into an AC power receptacle.

## Connect to Audio Output of TV.




Back of TV

### Optical Audio Output

Connect one end of an optical digital (toslink) cable to the TV’s Audio Out optical jack.

## Connect to Audio Input of Z-Base 580.

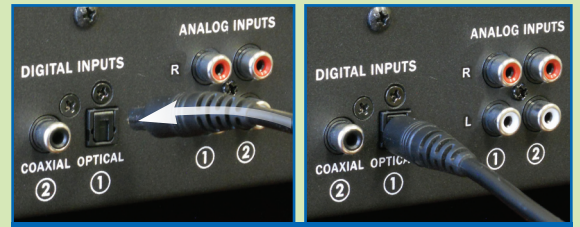

Back of Z-Base 580

### Z-Base 580’s Optical Audio Input

Connect the other end of the optical cable to the Z-Base 580’s optical input jack.

## Flip on the Power.



## Select the correct input.

Select the TV input using the remote control **OR** the front panel.



Optical digital input

Coaxial digital input

Input 1 (rear panel)


Input 2 (rear panel)

Input 3 (front panel)

## Other Audio Connection Options

### Phono Jack Analog Audio Out

White/red pair of phono output jacks (not “input”) on back of TV.

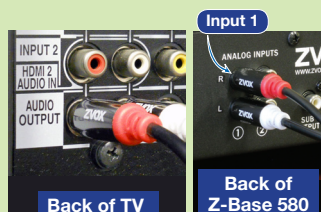


Back of TV

Back of Z-Base 580

### “Minijack” Analog Audio Out

Out Some TVs use a “minijack” output (not “input”) or headphone jack.

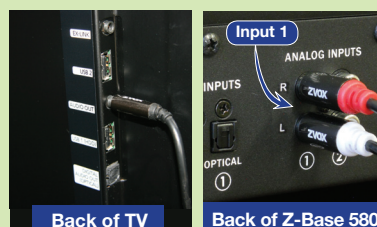

Back of TV

Back of Z-Base 580

### Coaxial Digital Audio Output

(Single phono jack, may be orange)

Any cable with a phono plug at each end can be used.



Back of TV

Back of Z-Base 580